

SG PICTOLED

DMX Control Channels			
Mode 1	Mode 2	Numeric	Chanel
CH1	CH1	0-255	Pan movement 0-530°
CH2	CH2	0-255	Pan fine 0-3°
CH3	CH3	0-255	Tilt movement 0-255°
CH4	CH4	0-255	Tilt fine 0-3°
CH5	CH5	0-255	Speed of Pan/Tilt movement with decreasing speed
CH6	CH6	0-255	Linea zoom
CH7	CH7	0-255	Linear dimmer
CH8	CH8	0	Shutter open
		1-127	Strobe effect with increasing speed
		128-159	Sudden effect with increasing speed
		160-191	Pulse effect with increasing speed
		192-255	Random effect with increasing speed
CH9	CH9	0-255	Red linear dimmer 1
CH10	CH10	0-255	Green linear dimmer 1
CH11	CH11	0-255	Blue linear dimmer 1
CH12	CH12	0-255	White linear dimmer 1
	CH13	0-255	Red linear dimmer 2
	CH14	0-255	Green linear dimmer 2
	CH15	0-255	Blue linear dimmer 2
	CH16	0-255	White linear dimmer 2
	CH17	0-255	Red linear dimmer 3
	CH18	0-255	Green linear dimmer 3
	CH19	0-255	Blue linear dimmer 3
	CH20	0-255	White linear dimmer 3
CH13	CH21	0-255	Color macro
CH14	CH22	0-255	Color macro speed
CH15	CH23	0-99	No function
		100-109	Reset
		110-255	No function