Wi DMX ®

Pro

Wireless DMX 512 TRANSMITTER

GB USER'S MANUAL
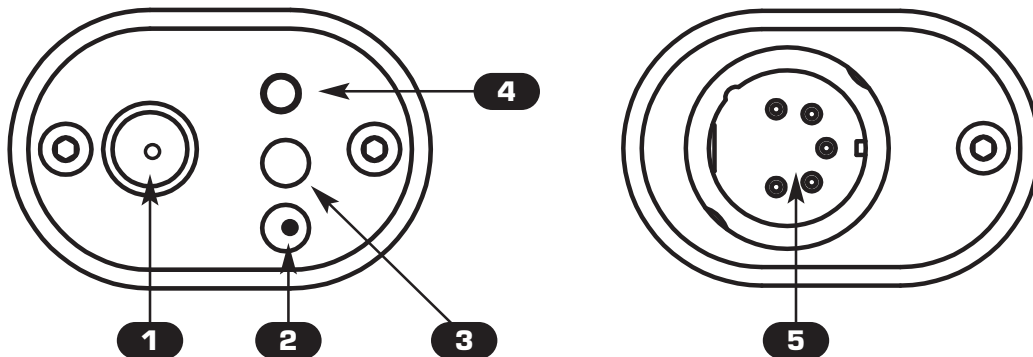
1 SMA antenna connector

2 Power input 5 Vdc 650 mA (included)

3 Blue led :
Slow blinking: Transmitter **OK**, no **DMX 512** signal.
Switched on : Transmitter **OK**, **DMX 512** signal **OK**..

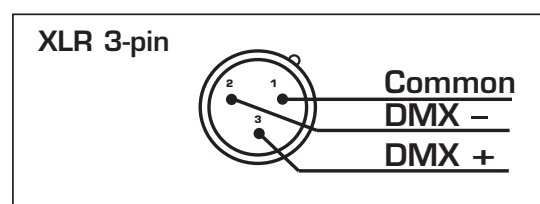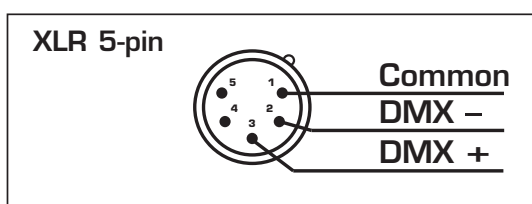**4** Red Button for change channel and pairing operation

5 Standard DMX 512 signal INPUT with a 3/5-pole XLR connector.

MAKING A DMX 512 SIGNAL CABLE   **GB**

Wi DMX pro has a DMX 512 input that use standard XLR 5-pin or XLR 3-pin connectors.
For the connection refer to the underlying picture

1 Power up Wi D Pen PRO receiver

2 Hold the button until the Wi D Pen Pro led starts blinking r-g-b alternately

3 Remove power supply from WiDMX *PRO*

4 Holding the red button, connect power supply and wait until the WiDMX *PRO* led starts fast blinking

5 When the led stops fast blinking, the Wi D Pen Pro receiver is paired

RICEVITORE / **RECEIVER**

Wi D PEN
Pro

key

Power input

XLR Connector 3/5 pole

RGB led
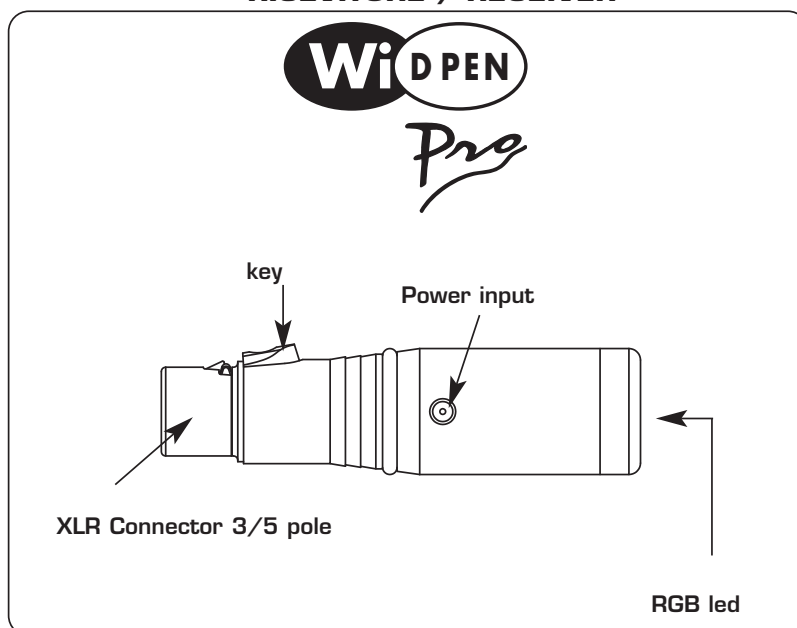
! Always connect the provided power supply

? In the event of radio problem, press the red button until Wi DMX PRO led do a fast blinking (a new radio channel is set)

Technical features:

Frequency range: 2,4 GHz - 2,483 GHz (ISM)

Number of channels: 20

Transmitter range: 500 meters/1640 feet open air

Voltage/current: 5 Vdc / 650 mA

Dimensions and weight:

Dimension (W x L x H) / Weight: 65 x 45 x 30 mm / 65 g

FC *FCC ID: UP2AWA24S*
Canadian Cert No IC: 6797A-AWA24S

CE0122①

CODEM MUSIC S.r.l. *- Via G.Pierini, 13 - 61122 PESARO - ITALY*
Tel. +39 0721 204357 - Fax +39 0721 203554
http://www.wi-dmx.com - E-mail: info@codemmusic.com